

Original Style Bug Headliner Diagram


W/o Sunroof	W/Sunroof
20-1118 '64-'67	20-1111 '64-'67
20-1119 '68-72	20-1112 '68-'72

Installation Order:

- #1 Door Post
- #2 Around Rear Window
- #3 Above Wheel Well Area
- #4 Below 1/4 Windows
- #5 Below Rear Windows
- #6 Main Section of Headliner
- #7 Sunroof Headliner Section

NOTE: Install complete headliner then cut out sunroof

NOTE: For Sunroof Models Only

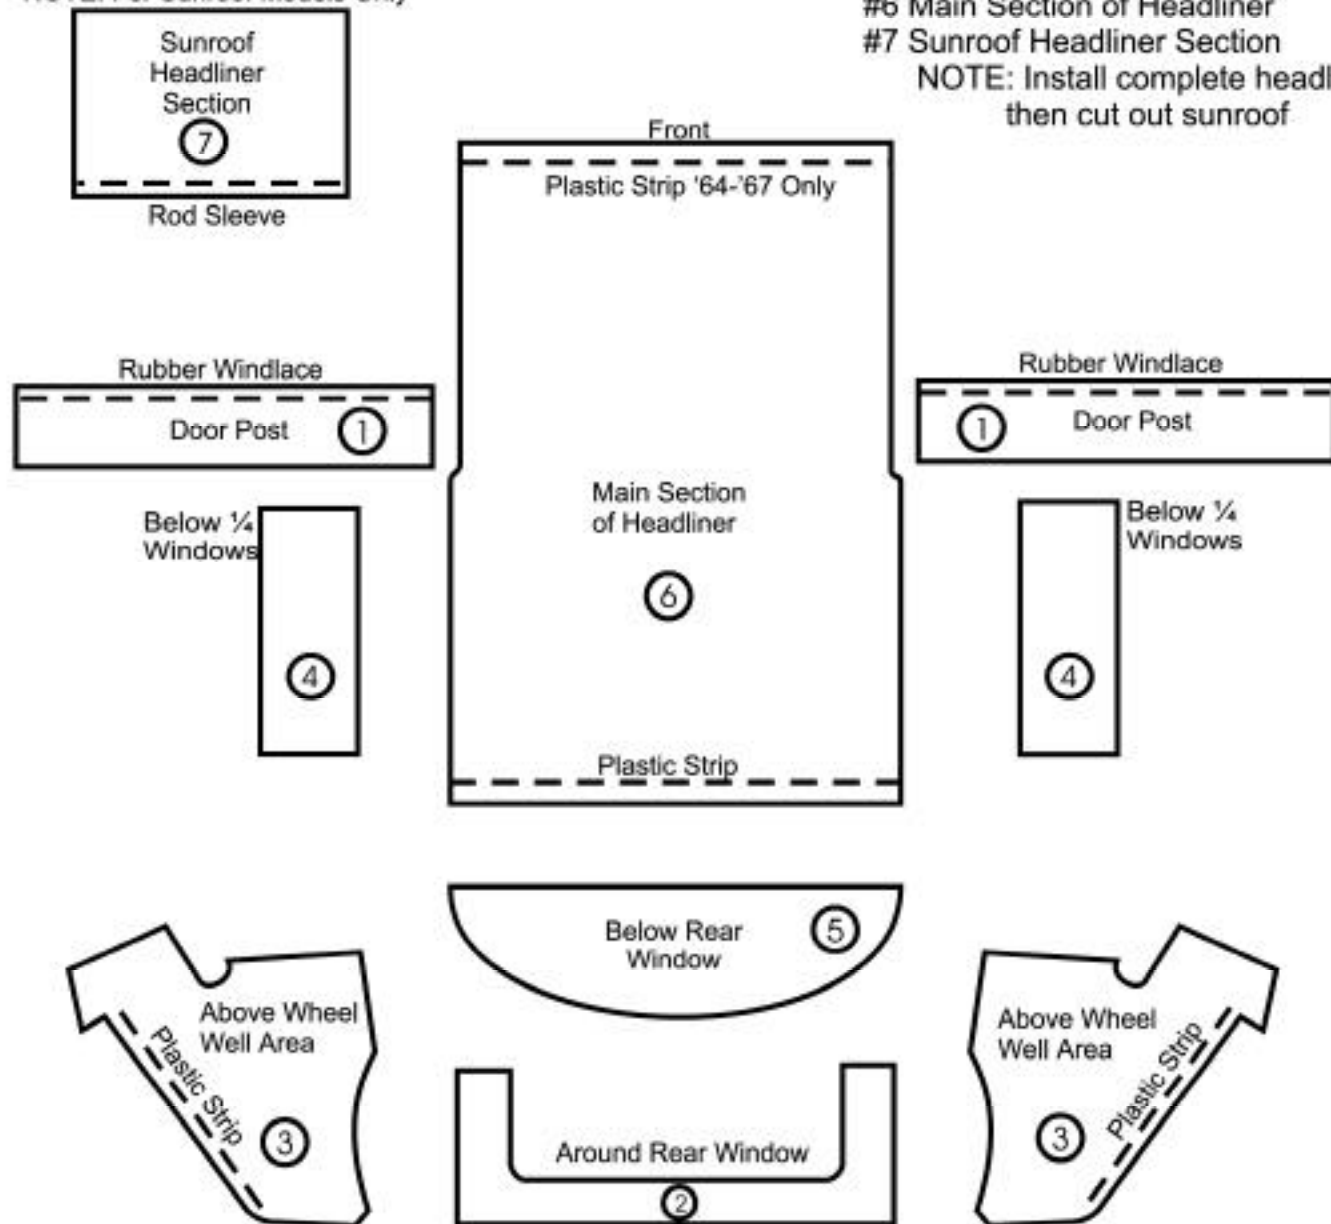

**HAVING PROBLEMS
WITH INSTALLATION?**
Give us a chance to help by calling
our toll free number



Monday thru Friday 8:30am to 4:00pm PST

1-800-624-2005
www.tmiproducts.com