

# Original Style Bug Headliner Diagram


W/o Sunroof      W/Sunroof  
20-1120 '73-'77    20-1113 '73-'77  
20-1121 '74 Only

## Installation Order:

- #1 Door Post
- #2 Above Wheel Well Area
- #3 Below 1/4 Windows
- #4 Below Rear Windows
- #5 Main Section of Headliner
- #6 Sunroof Headliner Section

NOTE: Install complete headliner then cut out sunroof

NOTE: For Sunroof Models Only

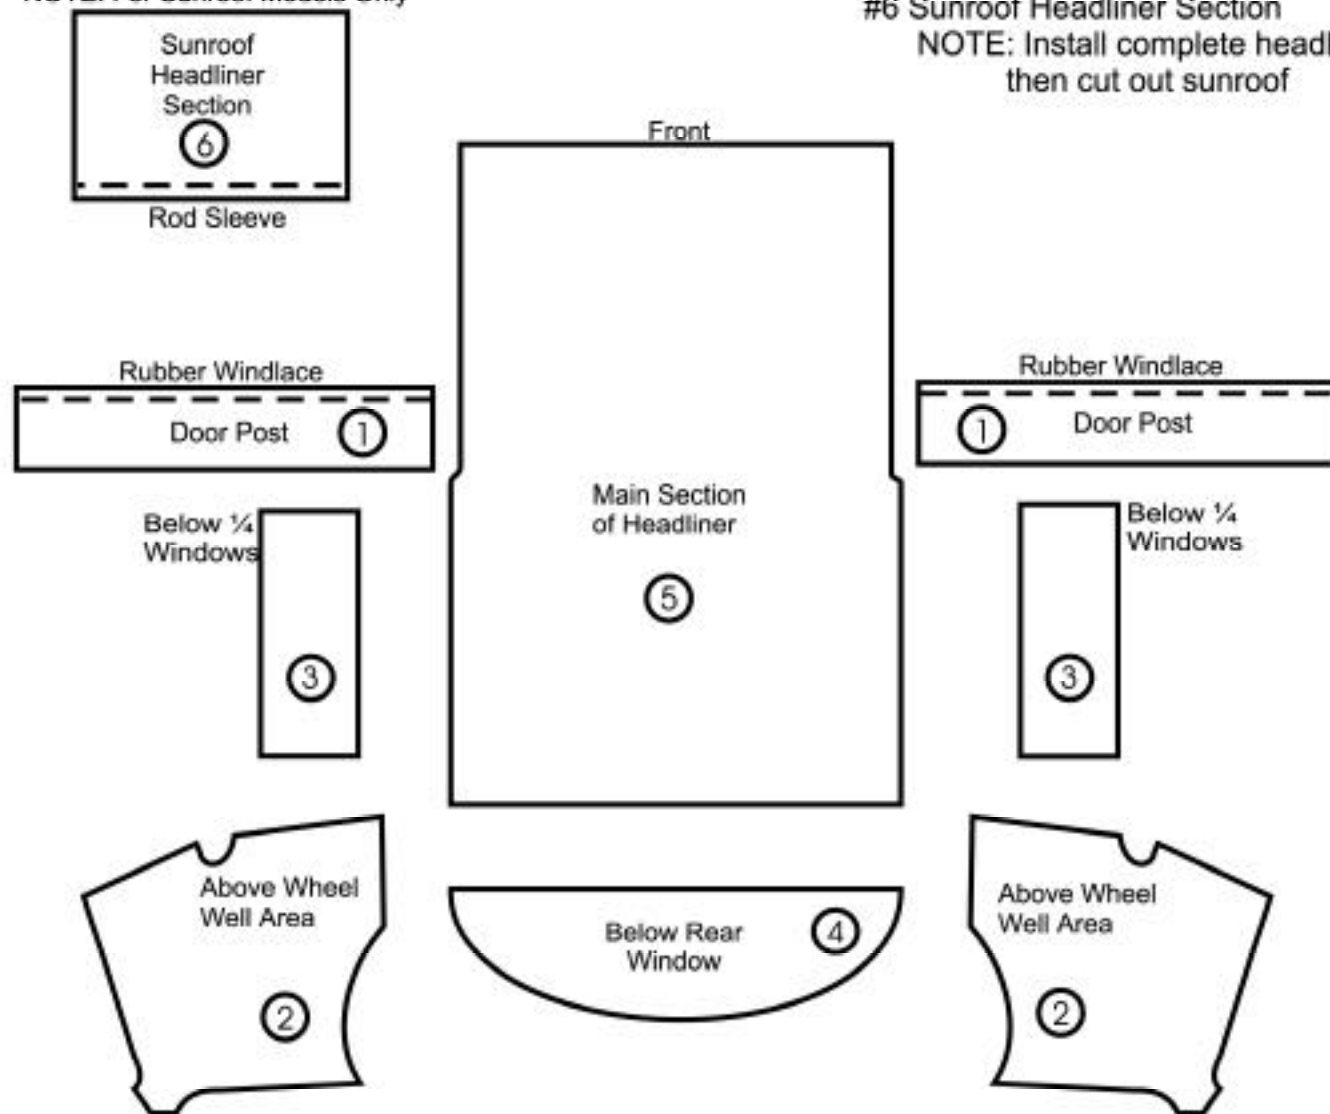

**HAVING PROBLEMS  
WITH INSTALLATION?**  
Give us a chance to help by calling  
our toll free number



Monday thru Friday 9:30am to 4:00pm PST

**1-800-624-2005**  
[www.tmproducts.com](http://www.tmproducts.com)