

# Original Style Bug Headliner Diagram

## W/o Sunroof


20-1115 - '53-'60

20-1116 - '61-'62

20-1117 - '63 Only

## Installation Order:

- #1 Door Post
- #2 Around Rear Window
- #3 Above Wheel Well Area
- #4 Below ¼ Windows
- #5 Below Rear Windows
- #6 Main Section of Headliner

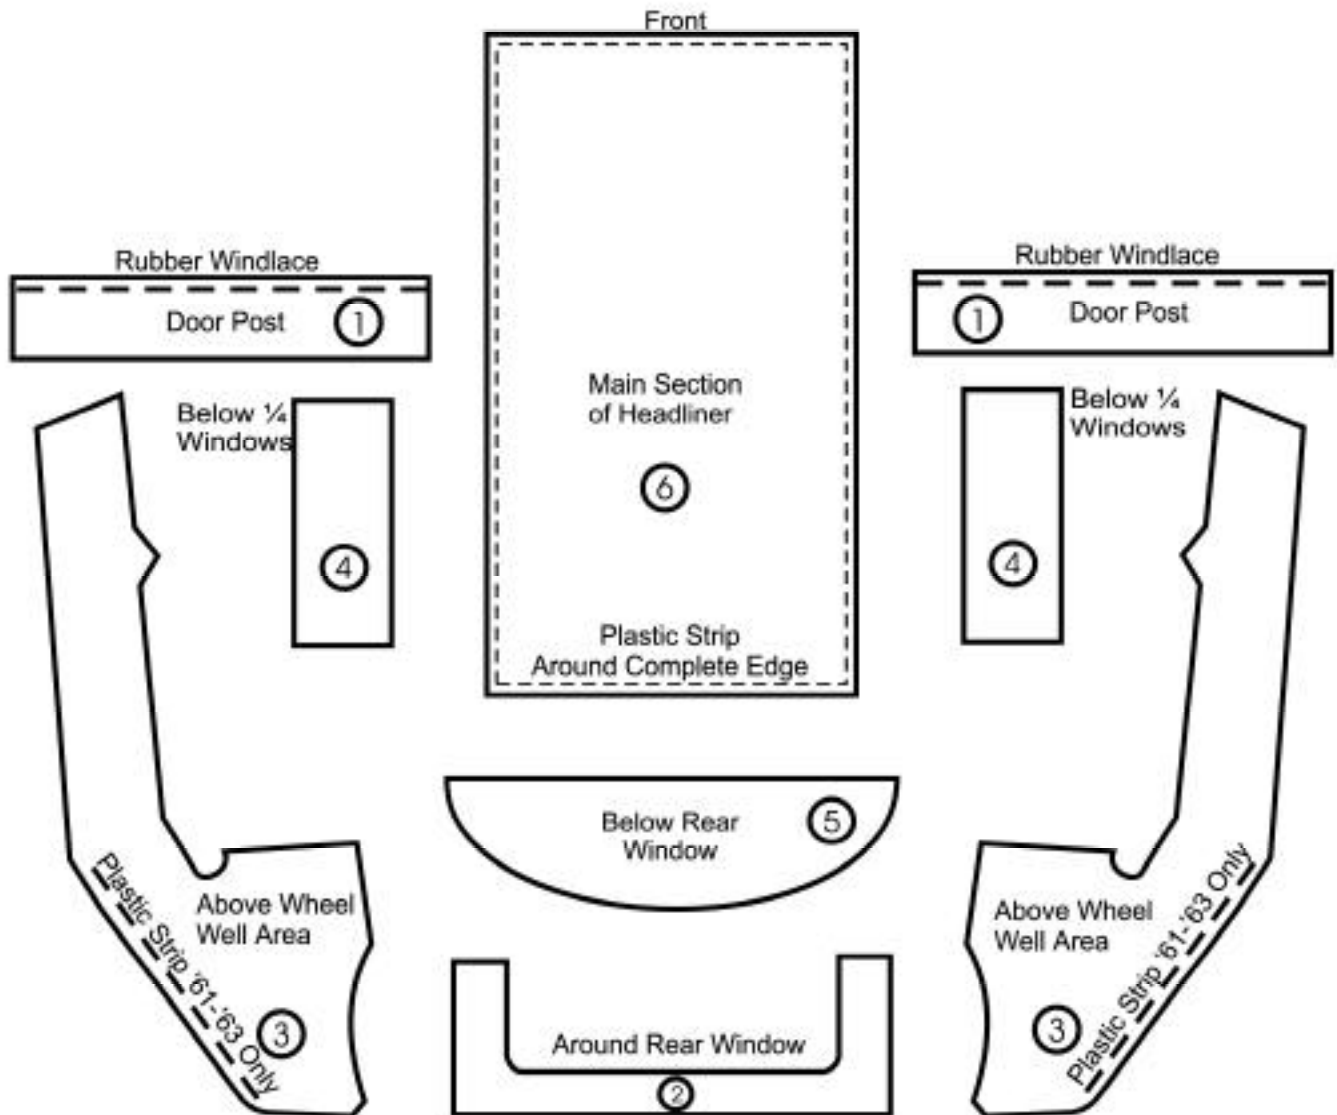

**HAVING PROBLEMS  
WITH INSTALLATION?**  
Give us a chance to help by calling  
our toll free number



Monday thru Friday 8:30am to 4:00pm PST

**1-800-624-2005**  
[www.tmipproducts.com](http://www.tmipproducts.com)